



CIMCHEK™ Test Strips are a new, simple, and troublefree method to test your CIMCOOL® Metalworking fluid mix concentration. Each CIMCHEK bottle contains 50 strips.

Use the attached test strips to learn how easy and reliable concentration testing and control can be with CIMCOOL Metalworking Fluids!


Simply dip the test strip into your CIMCOOL Metalworking fluid mix, and count the number of blue pads. For example, this strip has 3 blue pads.

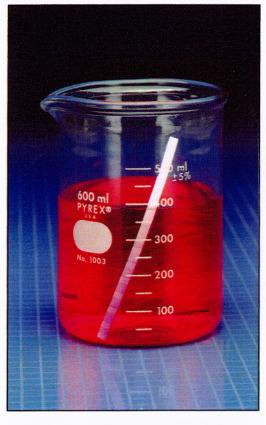

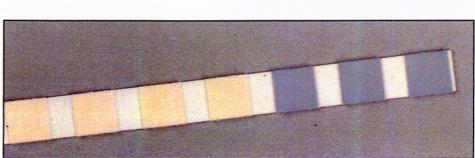

Refer to the instruction chart to determine if the mix is:









	Number of Blue Pads						
	1	2	3	4	5	6	7
Product	Approx. % of metalworking fluid mix						
Cimstar 60LF	2	4	6	9	13	17	21
Cimstar 60	2	4	6	7	11	15	18
Qual Star	2	4	6	7	11	15	18
Cimstar 55	2	4	5	7	11	14	18
Cimperial 1070	2	4	5	7-	11	14	18
Qual Star C	2	4	5	7	11	14	18
Cimstar 40/40B	2	3	5	7	10	13	17
Qual Star LF	2	3	5	6		13	16
Cimstar 540	2	3	5	6		13	16
Cimtech 100	2	3	5	6		12	15
Cimstar 3700T	1	3	4	6		12	15
Cimtech 310	1	3	4	6		12	15
Cimtech 500	1	3	4	6		12	14
Cimtech 3900	1	3	4	6		11	14
Cimstar 3733	1	3	4	5	8	10	13
Cimtech 95	1	2	4	5	7	10	12
Cimtech 200	1	2	3	4	7		11
Cimtech 280	1	2	3	-4	6		
Cimtech 400	1	2	3	4	6	8	
Cimtech 410	1	2	3	4	6		
Cimtech 46C	1	2	3	4	6	7	
Cimclean 30	1	2	3	4	5		
Cimtech GL2015	1	1.5	2	3	5	6	
Cimtech 190	<1	7	2	3	-4	5	77
	Weak			ОК		Stre	ong

Important

Use only as recommended by Milacron. When not using, keep container tightly capped. Store at room temperature. Do not remove or swallow desiccants. Do not swallow test strips.

Instructions:

- Dip test strip vertically into sample so all 7 pads are submerged. Do not place test strip in the fluid stream.
- Slowly swish test strip back and forth for 5 seconds.
- Remove strip from sample and shake once to remove excess fluid.
- 4. Hold strip horizontally, pad side up, for 1 minute.
- Interpret results by counting the number of blue pads. Refer to chart.

This bottle contains 50 test strips.

© 1997 Milacron Marketing Company Cincinnati, Ohio 45209

For additional information call 513/841-8133.

BENEFITS... No Equipment No Chemicals Inexpensive No Lab

Quick Saf

To purchase CIMCHEK™ Test Strips contact:

Your local Milacron Consumable Products Division Industrial Distributor

Or for more information contact:

Milacron Marketing Company Consumable Products Division Customer Service Cincinnati, OH 45209 800/319-2275 or 800/263-2271 www.milacron.com



SAMPLE NOT FOR RESALE

CIMSTAR®, CIMPERIAL®, CIMTECH®, CIMCLEAN®, and QUAL STAR®, are registered trademarks of Milacron.





